

Meanwell Power Supply Installation mounting guide



- 1. This product must be installed by a suitably qualified person
- 2. Contact with electricity can cause serious injury or death. Disconnect power supply before connecting or disconnecting this product.

Specification

This Meanwell power supply unit is designed for roof cavity installation, and is for use only with Redilight lighting systems.

Redilight Model	Meanwell Model	Output
RPS60	ELG75-36A	36V, 0~2.1A
RPS150	ELG150-36A	36V, 0~4.17A
RPS-250	ELG-240-36A	36V, 0~6.66A

Installation Guidelines

- 1. Select an installation location that allows free circulation of air around the unit, clear of any flammable or corrosive material and a minimum distance of 500mm from any other electrical equipment or device.
- 2. The power supply should be mounted with at least two non adjacent fixings.
- 3. DO NOT cover power supply with insulation or any other material.
- 4. DO NOT mount in direct sunlight.
- 5. **DO NOT** mount power supply within 2m of any heating device.
- 6. Connect the Extra low 36VDC output side of the power supply to the Redilight system.

