


2 x 6watt downlight connection information

When installing the Redilight 2 x 6watt downlight kit follow this simple rule;

The Redilight light driver (A) is factory set with a single 12watt output socket,
The 2 x 6watt downlights (C) must be connected to the 2way splitter box (B)
which in turn connects to the driver. Failure to do this will void the warranty.

See diagram

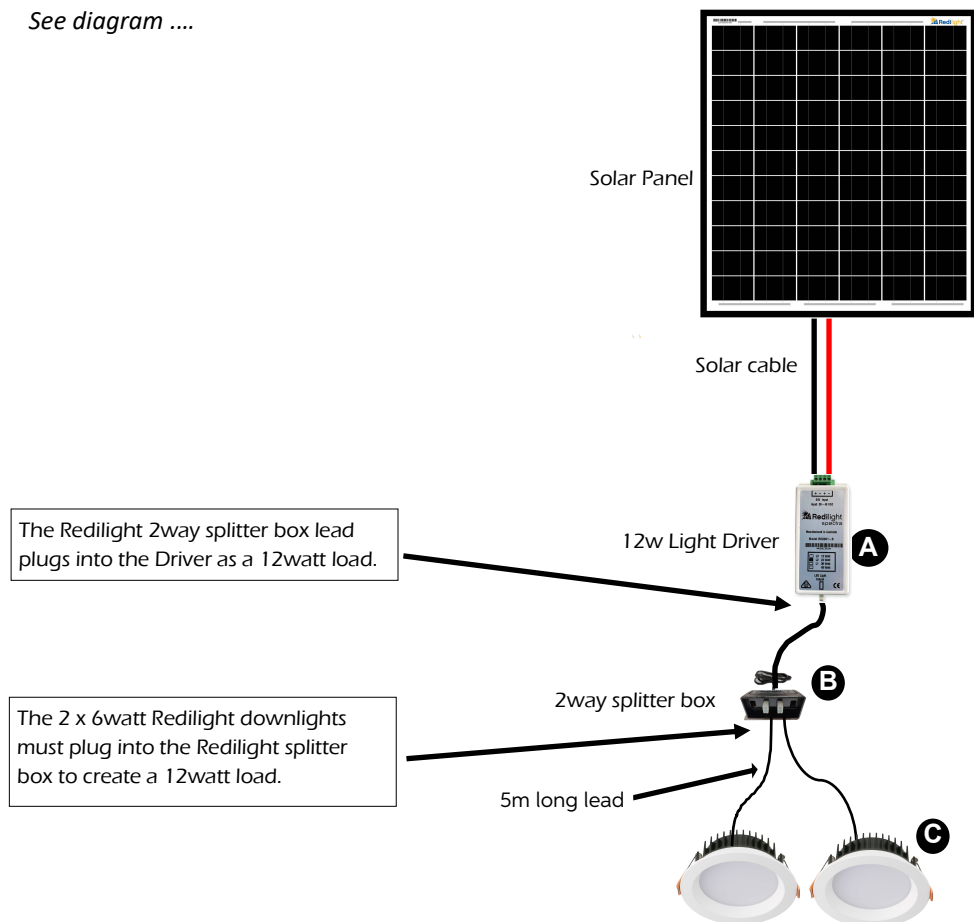

CAUTION - If On/Off control of the lights is required you must switch the driver which in turn controls both lights. **Do Not** individually switch each light fitting.