




4 x 6watt downlight connection information

When installing the Redilight 4 x 6watt downlight kit follow this simple rule;

The Redilight light driver (A) is factory set with a single 24watt output socket,
All 4 x 6watt downlights (C) must be connected to the 4way splitter box (B)
which in turn connects to the driver. Failure to do this will void the warranty.

See diagram

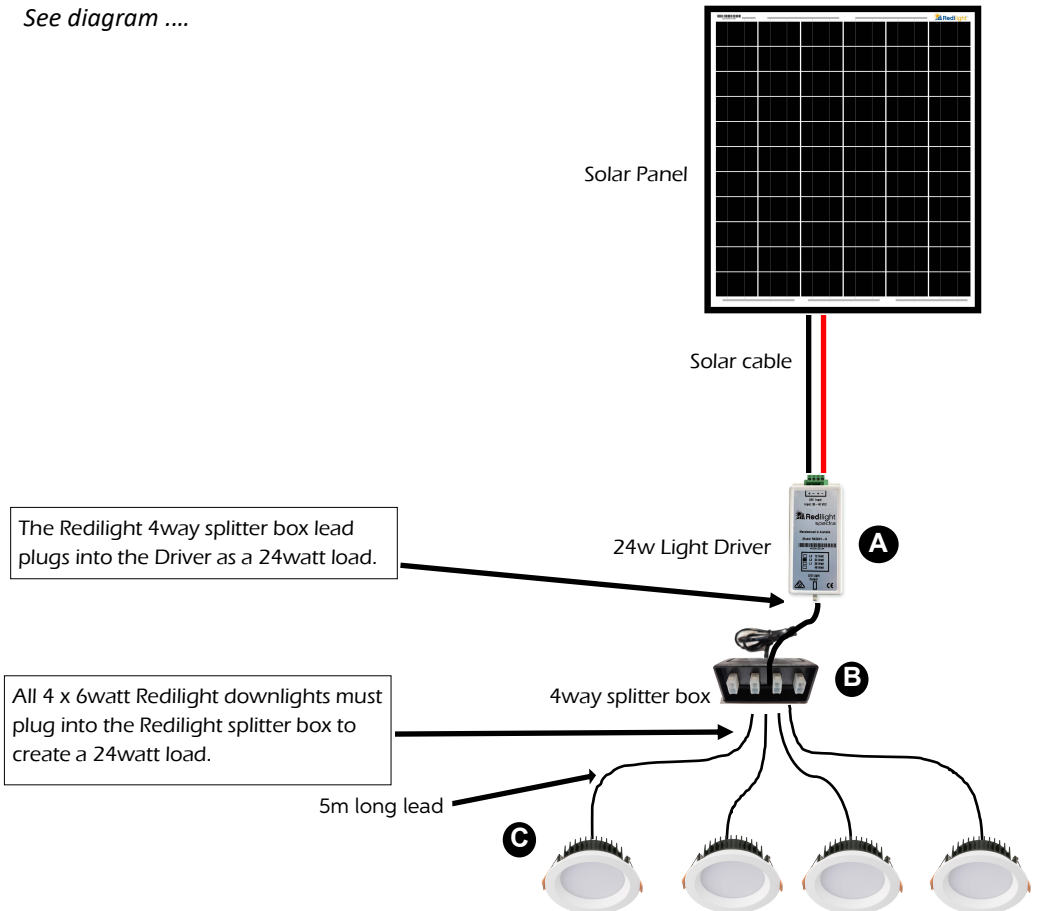

CAUTION - If On/Off control of the lights is required you must switch the driver which in turn controls the four lights. Do Not individually switch each light fitting.